


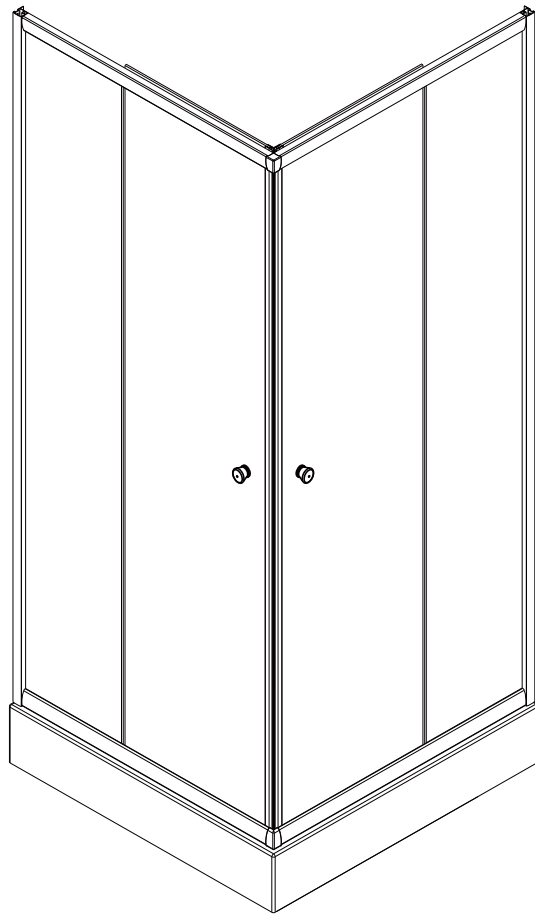

















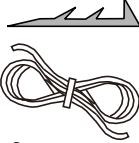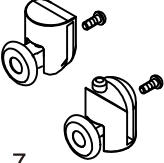


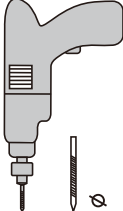

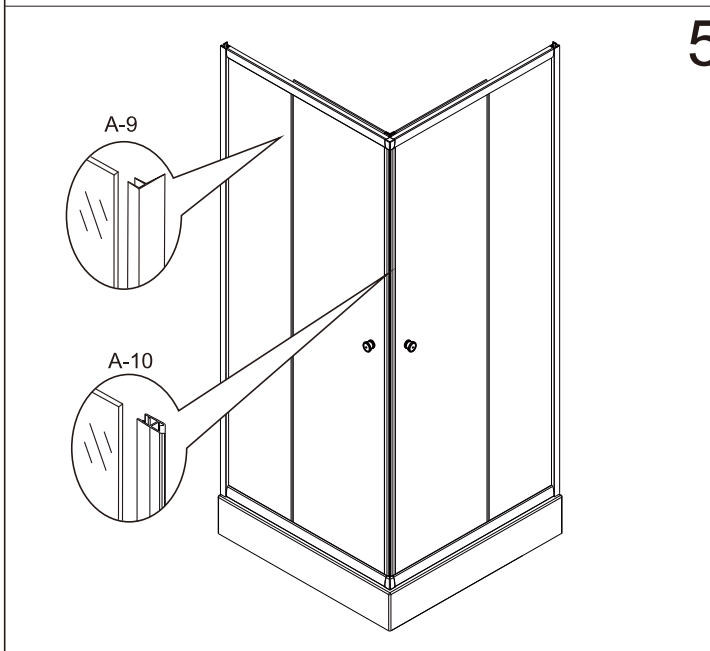
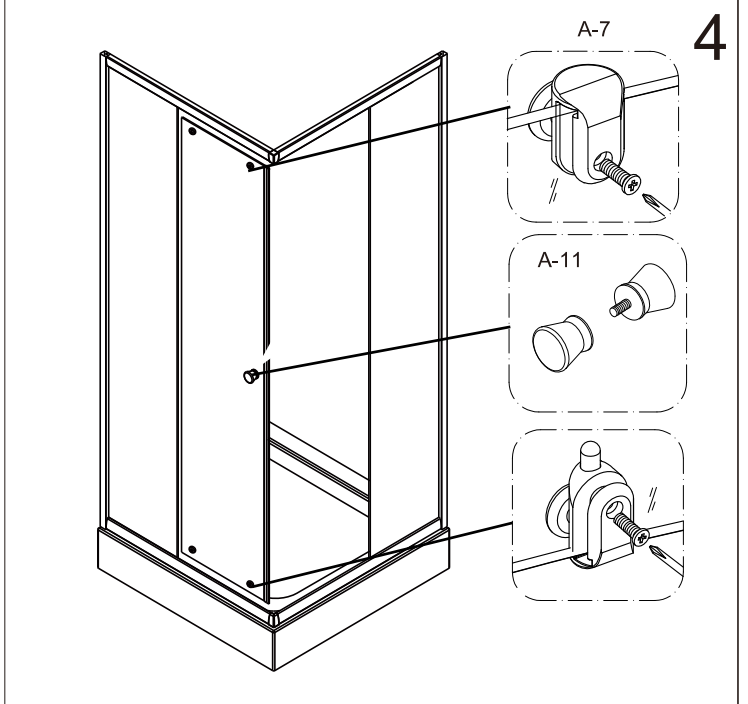
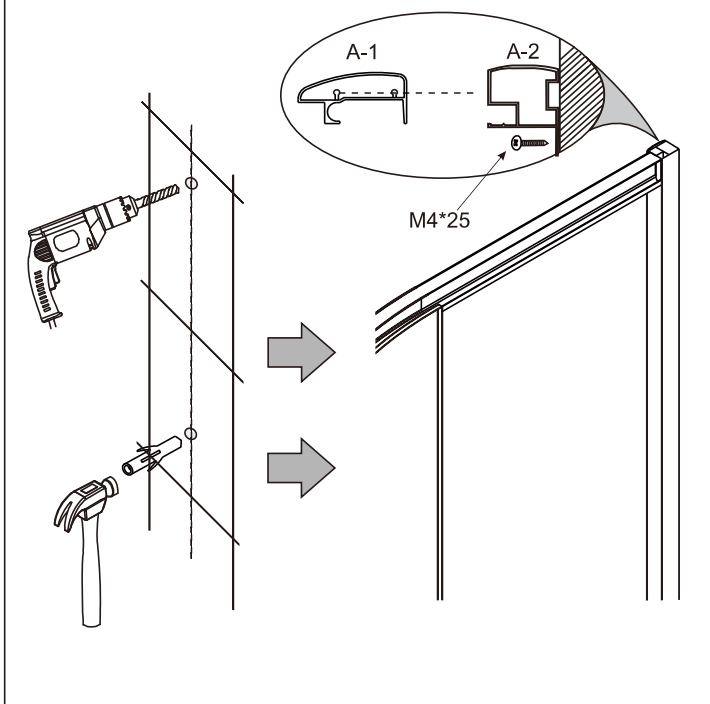
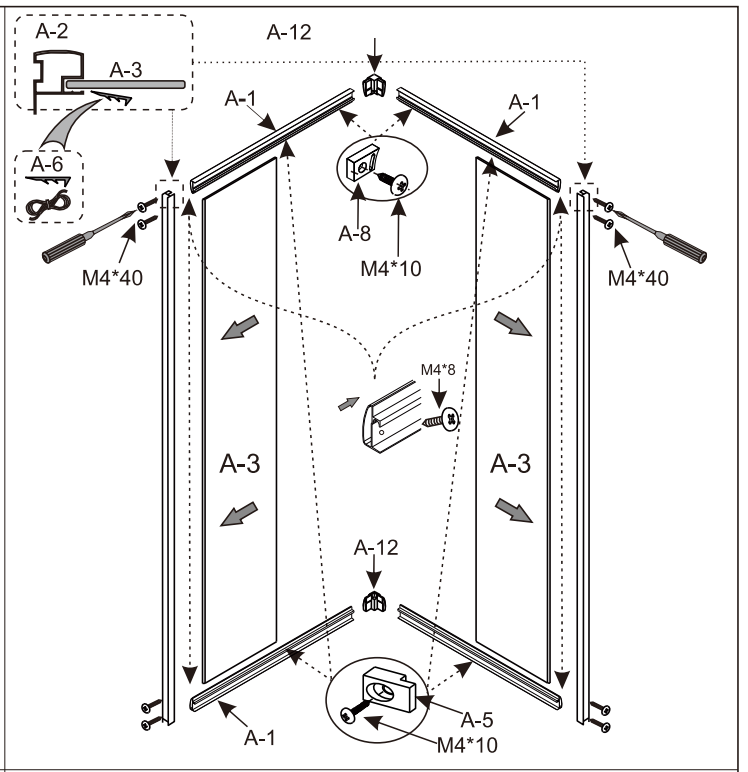
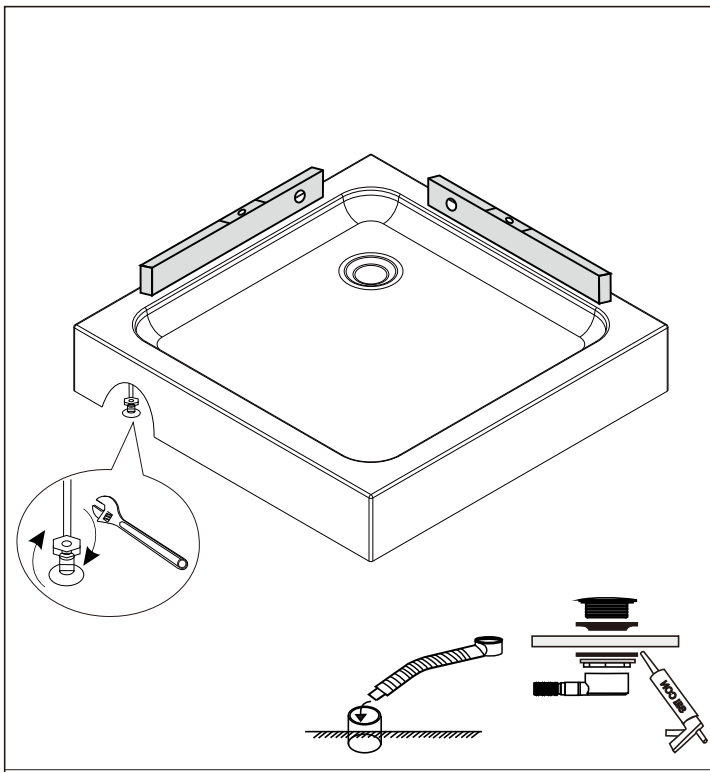


ZEQ8111-ZEQ911B-ZQ8111-ZFQ81



 A-1	 A-2	 A-3	 A-4	 A-5	 A-6	 A-7	
 A-8	 A-9	 A-10	 A-11	 A-12			
	 ST4*16=8	 ST4*25=6	 ST4*10=4	 ST4*8=4			
							



Достоверную информацию уточняйте на santehnica.ru.